

## GrindAIR® Installation Instructions

### - For Dremel® Rotary Flex Shaft -

- Step 1** Remove the housing cap or nose cap from the Dremel® tool. Some models require the collet nut to be removed prior to removing the housing cap.
- Step 2** After the housing cap is removed place the GrindAIR™ attachment on the body of the Dremel® Rotary Flex Shaft and rotate the GrindAIR™ attachment clockwise until it is snug. The attachment will replace the nose cap. Refer to images below.

