

Replacing Disposable Bags

- Clipper Vac® Tote (with Bag Option)-

The bag should be replaced when it is full. The operator should check this regularly by removing the front door. Bag should be replaced when suction is reduced. Running the system with a full bag or clogged hose may damage it by causing it to overheat.

To change the bag:

- Step 1** Remove the front door. At the left side of the bag there is a white plastic adapter that is screwed into the cardboard on the bag. This adapter is pushed onto a fitting inside the machine. This is a friction fit.
- Step 2** After removing the used bag unscrew the white plastic adapter from the bag and screw it completely into the new bag. With the bag still folded push the adapter onto the fitting inside the machine. Reinstall the door.

Note: The machine has a secondary filter to protect the motor if a bag should break or leak. If this happens the operator should remove the secondary filter (gray foam directly above the bag, mounted to the bottom of the motor) and thoroughly clean it before operating the machine.

