

# Clipper Vac® Attachment Compatible with Body Style “B” ANDIS® AGC® Clipper Installation Procedure



Before you begin, please gather the required materials:

- Phillips head screwdriver
- Utility knife
- Clipper Vac® Attachment
- Body Style “B” ANDIS® AGC® Clippers

## STEP 1:

Body Style “B” ANDIS® AGC® Ultra Edge® Clipper (blue). Remove the blade and blade drive cover.



## STEP 2:

Remove the upper housing by removing the four (4) Phillips head screws located on the underside of the clipper. Carefully hold the clipper upright to prevent any internal parts from becoming dislodged. Place the black upper housing provided onto the clipper and reinstall the four (4) screws. Be careful not to overtighten!



**STEP 3:**

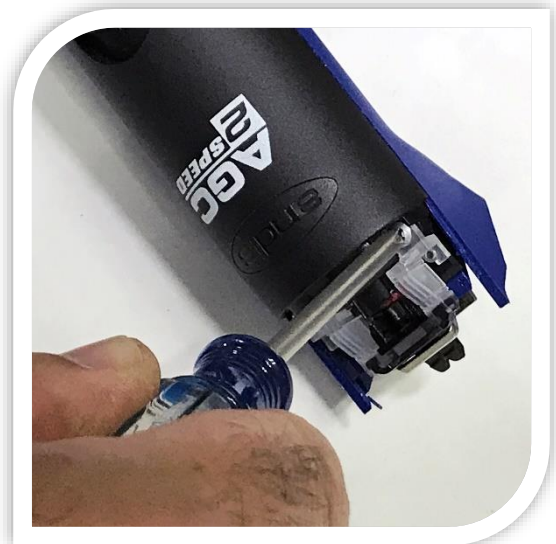
Using a sharp utility knife, remove the thin plastic rib on both sides to create a flat surface.

---

**STEP 4:**

Remove the blade drive screws.

---

**STEP 5:**

Install the clipper attachment. Tilt the attachment back towards the clipper body and slide the tab under the upper housing of the clipper. After the tab has been inserted tilt the attachment forward and snap into position. Install the screws provided with the attachment and only tighten until snug. Be careful not to overtighten. Save original parts.

