


# Clipper Vac® Attachment

## Compatible with Wahl® Bravura



**Step 1** Remove the blade from your clipper to have an open view of the upper housing.

**Step 2** Open the small tube of silicone supplied with attachment and place a liberal amount on the entire bottom of the black attachment.

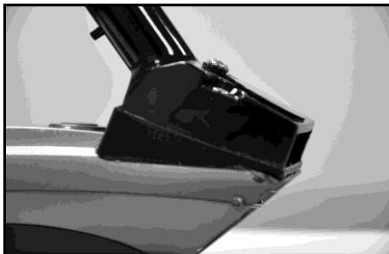

**Step 3** Place the Clipper Vac® Attachment, silicone side down, on the top of your clipper making sure to align the front of the attachment with the plastic housing of the clipper.

**Step 4** Excess silicone should squeeze from under the attachment. Trim with a razor blade or other sharp object after it dries.

**Note:** *Allow 24 hours before using the clipper to ensure a proper seal on the clipper.*

M.D.C. Romani, Inc./Clipper Vac® is not affiliated with, authorized by or endorsed in any way by Wahl®.