


TOTE

Clipper Vac®

Instruction Manual

One Operator Unit

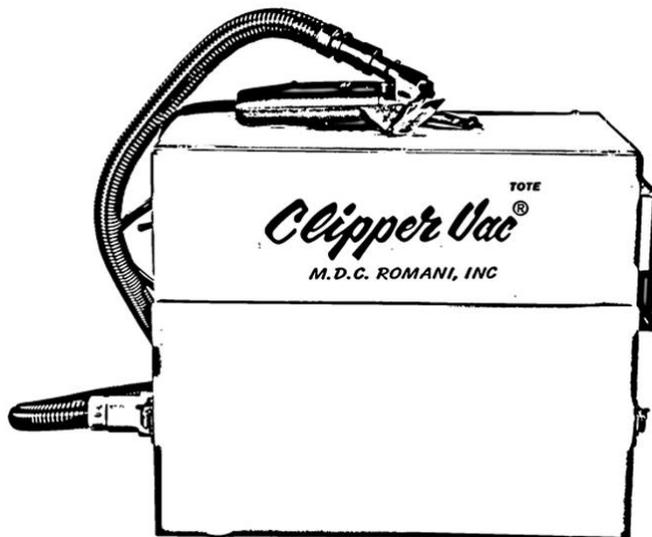

****IMPORTANT****

****KEEP FOR FUTURE USE****

THE TOTE CLIPPER VAC®

The Tote Clipper Vac® is a portable, one operator unit designed to be placed on a table or shelf, not on the floor.

The Tote Clipper Vac® holds 6 gallons of hair; however, empty as often as necessary. Do not suffocate your motor by improper emptying of the unit.

The main regulator is on the clipper heads.

The Tote Clipper Vac® is designed for years of use with the proper care.

Operational and Safety Guidelines

- “ Do not operate the Clipper Vac® with a crushed vacuum hose. This will restrict airflow to your motor and cause it to over heat, causing the motor to prematurely fail.
- “ Do not operate in areas where flammable vapors are present.
- “ Never spray cool lube into blades while Clipper Vac® is connected.
- “ Do not remove upper door without first disconnecting the electrical supply.
- “ Never work on the electrical components without first disconnecting the electrical supply.
- “ Do not vacuum wet or damp materials.
- “ Do not vacuum excessive dirt and debris.
- “ Never run your Clipper Vac® without the filter on.

DO NOT HANG UNIT BY HANDLE

Maintaining Your Clipper Vac®

Your Clipper Vac® can be easily maintained and have a long lasting life using these simple tasks:

1. We recommend replacing your filter every 8-12 months. This does not require dismantling the motor. **DO NOT REMOVE THE FILTER UNTIL YOU ARE READY TO CHANGE IT!** See instructions on page 6.
2. Replace the motor brushes after approximately 1 to 1½ years, 1000 hours of use, or when the motor fails.
3. Keep the hair storage box clean; do not overfill.
4. Each clipper attachment is different. Please follow the instructions that were furnished with attachment.

TROUBLE SHOOTING

PROBLEM: Unit will not start.

POSSIBLE CAUSE:

SOLUTION:

- | | |
|-----------------------|--|
| 1. power supply | 1. check outlet for power make sure unit is plugged in |
| 2. damaged wiring | 2. locate and repair wiring |
| 3. worn motor brushes | 3. replace brushes |
| 4. worn motor | 4. replace motor |
| 5. worn switch | 5. replace switch |

Brush Changing Procedures

To remove the used brush:

Loosen the two screws holding the brush clamp enough to allow the brush to lift upward and slide out.

Note: It is not necessary to completely remove the screws.



To install the new brush:

Slide the new brush in with the pin facing downward. The brush should lock into place. The pin should be inside the slot on the motor housing. Tighten both screws - be careful not to over tighten.

Repeat procedure for other brush.

Test run motor before replacing the top on the unit

The new brushes may spark more than normal until they wear in.

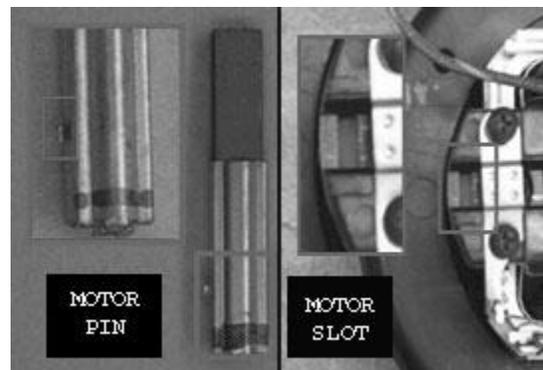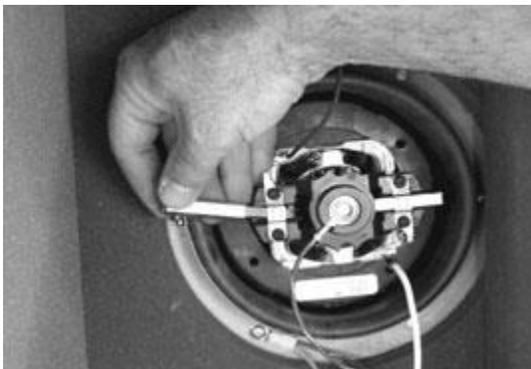

Filter Changing Procedure

Never operate the Clipper VAC® without the filter on the motor. When ordering filters, be sure to specify that your filter is held in place by a nut.

1. Unplug the Clipper Vac system.
2. Open the lower compartment.
3. Remove the wing nut under filter.
4. Pull filter downward and remove.
5. Clean area where filter contacts the motor.
6. Install new filter and replace the nut. Make sure the filter is pressed tightly against the shelf or hair will enter the motor. Do not over tighten the nut.
7. Tighten the wing nut.

Filters are designed especially for Clipper VAC® and may be purchased from M.D.C. Romani, Inc.

Terms of Sale & Freight Policy

Warranty

The **Clipper VAC®** vacuum is a heavy duty cleaning machine of superior quality. It has been carefully inspected and tested before shipment and is covered by our warranty for one year to correct any defects caused by faulty material or workmanship. Naturally, we assume no responsibility for damage caused by misuse, careless handling or unauthorized service. No other guarantee, written or verbal is authorized by us.

FREIGHT POLICY: All shipments are F.O.B., Indiana, PA 15701.

GENERAL PRICING POLICIES:

1. Prices are subject to change without notice.
2. We reserve the right to quote and sell direct to Government Agencies, O.E.M. using **Clipper VAC®** equipment as part of their product and certain selected national accounts not normally served by distributors.

RETURNED GOODS POLICY:

1. Authority for return must be obtained in writing from M.D.C. Romani, Inc.
2. Transportation charges must be prepaid.
3. Items to be returned must be currently catalogued models. Returned goods will be processed in the following manner:
 - A. Warranty Returns
 1. Returns for credit or repair: Units which are found to be defective will be repaired at no charge except labor and returned freight prepaid to the customer or credit will be issued as appropriate.
 - B. Non-Warranty Returns:

The warranty is not applicable for units which have extended the warranty period or, in the judgement of **M.D.C. Romani, Inc.** have been damaged from abuse and/or misuse.

 1. Returns for credit: Goods authorized for return are subject to a 20% restocking charge when the condition of the goods permits inspection, testing and replacement to finished stock. Charges for restocking units will either be scrapped or returned freight collect at the customer's discretion. No credit will be allowed.
 2. Returns for repair: Repairs or recondition are subject to standard repair charges. Minimum charge is \$10.00.

It is the policy of **M.D.C. Romani, Inc.** to stand firmly behind our products to assure satisfaction in terms of high quality and workmanship. **M.D.C. Romani, Inc.** assumes no responsibility for damage in transit of returned goods. Returns are to be sent to the factory.

M.D.C. ROMANI, INC.
2860 WEST PIKE ROAD
INDIANA, PA 15701

PHONE (724) 463-6101 FAX (724) 349-0237

cvac@clippervac.com
www.mdcromani.com · www.clippervac.com

U.S. Patents: #5,088,199 #337,176 #4,706,326 #5,881,462 #2,054,871 #1,432,378
#5,924,202 ®#2,054,871

Canadian Patents: #Rd Enr 70346 #2,052,506 ®#436,109

©August 2001